

# 18" Air Dancer® Blower



## I. Assembly and Operation

1. Install the included wheels with nut on each of the lower four corners of the blower as pictured above. This will allow an opening space for a sufficient amount of air to flow into the blower to power your Air Dancer®.
2. Plug the power cord into a standard household electrical outlet.
3. Attach the Velcro base of your 18" diameter Air Dancer® onto the matching Velcro outer rim of the blower.
4. Turn the dial switch of the blower to your preferred speed and watch your Air Dancer® in action.

## II. Specs

- Number of Speeds: 3
- Blower Horsepower: 1hp
- Power: 110v/60hz
- CFM: 5,000
- Amps: 11
- All parts needed for operation are included
- Not intended for rain or damp conditions
- Diameter of blower is 18"
- Compatible with all 18" velcro mount Air Dancer® attachments
- Locking Roller Wheels: Yes
- US patent (# 6,186,857) for the Dynamic Inflatable Technology, is strictly enforced.
- 1 Year Limited Warranty

III. To Reorder, please call LookOurWay at 866-586-3888.